



## Reading your SCT device serial number

Now that you have your SCT Device, below is a quick reference on how to find the serial number in your device.

For X3/SF3:

1. To find the serial number in your device, first power up the device by either plugging it into USB or by plugging it into your vehicle.
2. Next use the left or right keypad arrows to scroll over to the "Device Info" menu, then press select.
3. The first item you should see on this screen is the device's serial number.

Example:

For Livewire:

1. To find the serial number in your device, first power up the device by either plugging it into USB or by plugging it into your vehicle.
2. Next turn the jog wheel left or right to scroll over to the "Dealer/Device Info" menu, then press the jog wheel.
3. The third item you should see on this screen is the device's serial number.

Example:

For TSX:

The TSX device uses two different serial numbers, one is for the TSX Monitor, and one is in the TSX Vehicle Interface Module.

To obtain the serial number from the TSX Monitor:

1. First power up the device by pressing the power button on the top of the TSX Monitor.
2. After the device boots up to the main menu, press the "Device Info" icon.
3. The third line on this screen will show you the TSX Monitor's serial number.

To obtain the serial number from the TSX Vehicle Interface Module:



1. First power up the device by plugging it into your vehicle.
2. Next power up the TSX Monitor by pressing the power button on the top of the Monitor.
3. After the monitor boots up to the main menu, press the "Device Info" icon.
4. This screen will show you the information about your TSX Monitor. Now press the "Refresh" button in the bottom right hand corner of the screen.
5. Now you will be displayed a screen with both the TSX Monitor information and the TSX Vehicle Interface Module information.
  
6. The third line from the bottom of the screen will display the serial number for the TSX Vehicle Interface Module.

Example: